 





**AIR-CELL®**


## STEEL-FRAMED WALL INSTALLATION INSTRUCTIONS

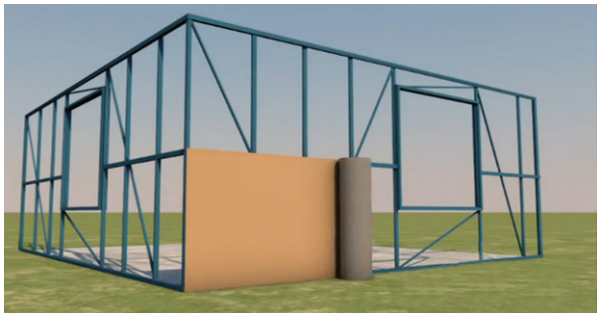

 
1. Fix **Kingspan AIR-CELL®** loosely to the outside of frame leaving flexibility for **Kingspan AIR-CELL®** to be dished onto the wall cavity.

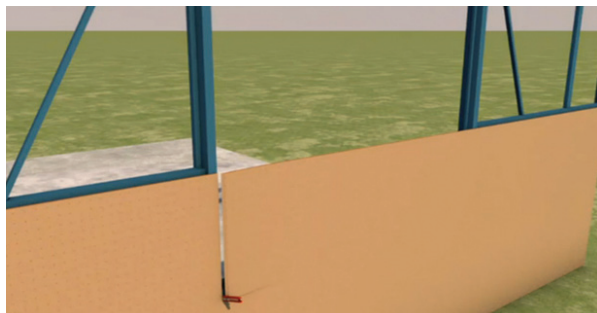

2. Cut **Kingspan AIR-CELL®** carefully around doors, windows and other openings, so that it neatly abuts to frames.

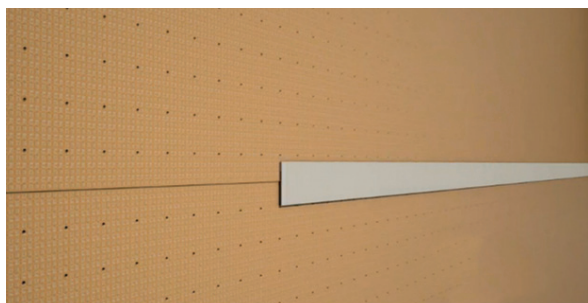

3. Butt join **Kingspan AIR-CELL®** sheets and tape with a 48 mm wide reinforced foil tape.

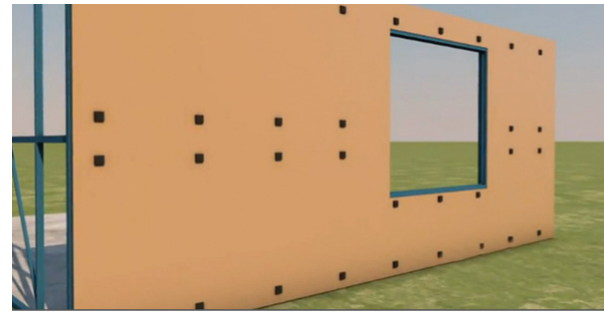

4. Provide for outer air space by adhering the **Kingspan AIR-CELL Spacer Biscuits™** to the outer face of the **Kingspan AIR-CELL®** (approximately 3 Spacer Biscuits™ per square metre required).



5. Commence installing cladding in accordance with manufacturer's installation instructions.



Australia Tel: 1300 247 235  
Email: [info@kingspaninsulation.com.au](mailto:info@kingspaninsulation.com.au)  
[www.kingspaninsulation.com.au](http://www.kingspaninsulation.com.au)

New Zealand Tel: (09) 969 1613  
Email: [info@kingspaninsulation.co.nz](mailto:info@kingspaninsulation.co.nz)  
[www.kingspaninsulation.co.nz](http://www.kingspaninsulation.co.nz)

Asia Email: [info@kingspaninsulation.asia](mailto:info@kingspaninsulation.asia)  
[www.kingspaninsulation.asia](http://www.kingspaninsulation.asia)