





AIR-CELL®


Steel-Framed Wall Installation Instructions

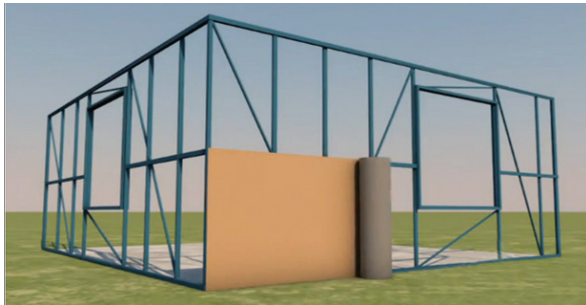

1. Fix Kingspan AIR-CELL loosely to the outside of frame leaving flexibility for Kingspan AIR-CELL to be dished onto the wall cavity.

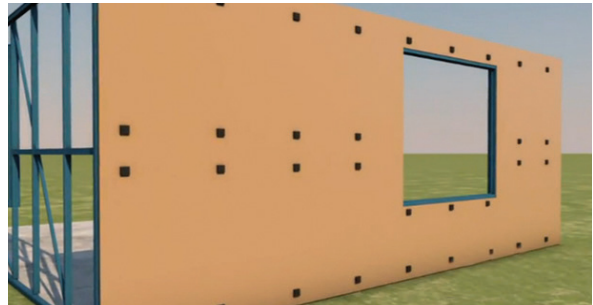


4. Provide for outer air space by adhering the Kingspan AIR-CELL Spacer Biscuits™ to the outer face of the Kingspan AIR-CELL (approximately 3 Spacer Biscuits per square metre required).

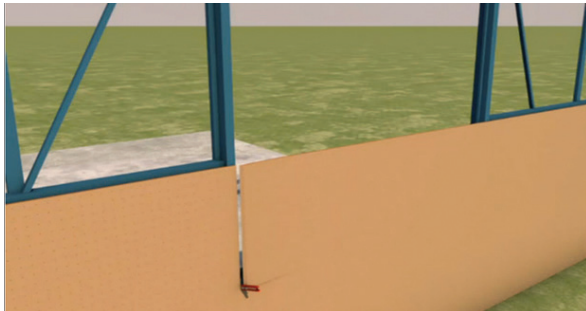

2. Cut Kingspan AIR-CELL carefully around doors, windows and other openings, so that it neatly abuts to frames.



5. Commence installing cladding in accordance with manufacturer's installation instructions.

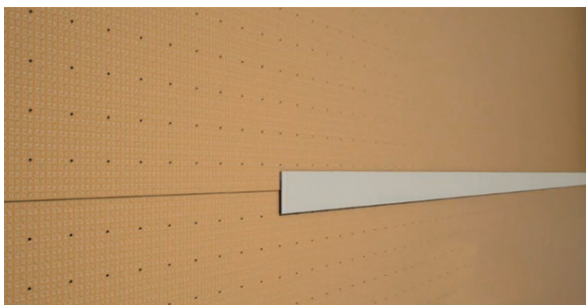

3. Butt join Kingspan AIR-CELL sheets and tape with a 48 mm wide reinforced foil tape.

Australia

Kingspan Insulation Pty Ltd

T: 1300 247 235

E: info@kingspaninsulation.com.au

www.kingspaninsulation.com.au



© Kingspan, AIR-CELL and the Lion Device are Registered Trademarks of the Kingspan Group plc in Australia and other countries. All rights reserved. © Kingspan Insulation Pty Ltd.

Kingspan Insulation Pty Ltd reserves the right to amend product specifications without prior notice. The information, technical details and fixing instructions etc. included in this literature are given in good faith and apply to uses described. Recommendations for use should be verified as to the suitability and compliance with actual requirements, specifications and any applicable laws and regulations. For other applications or conditions of use, Kingspan Insulation offers a Technical Advisory Service the advice of which should be sought for uses of Kingspan Insulation products that are not specifically described herein. Please check that your copy of the literature is current by contacting us or visiting <https://www.kingspan.com/au/en/business-groups/kingspan-insulation/AIRCELLInsulation/>

